



Dismounting Everest

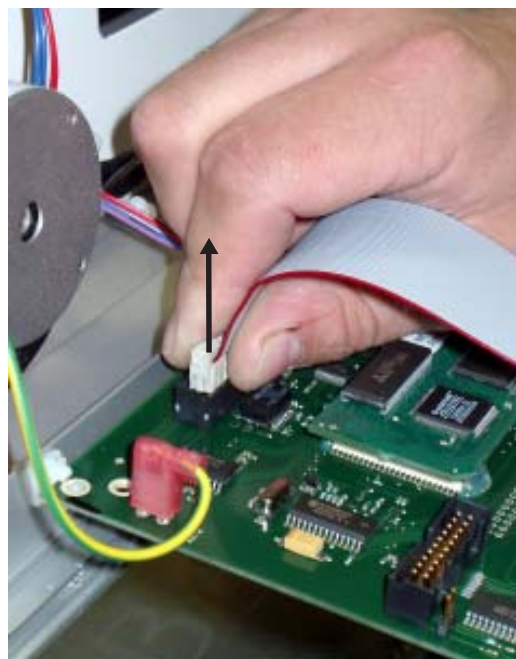

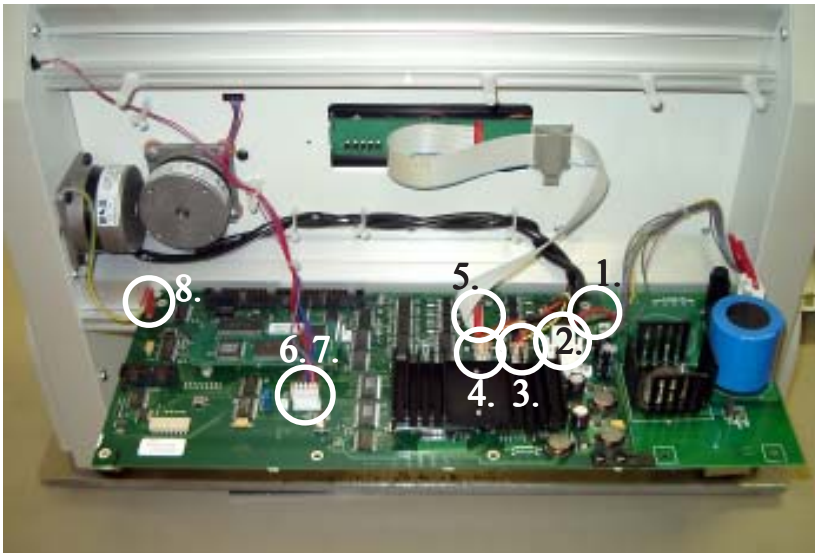

- 1. Keyboard
- 2. Power
- 3. Paper motor
- 4. Embosser head motor
- 5. Embosser head cable
- 6. Speaker
- 7. Paper sensor
- 8. Ground connector


7.



8.




9.

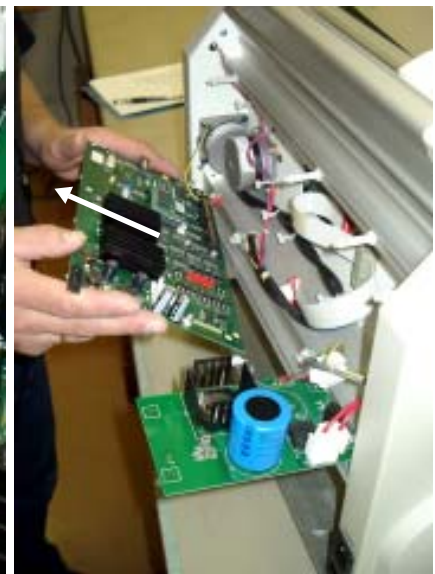

10.



11.

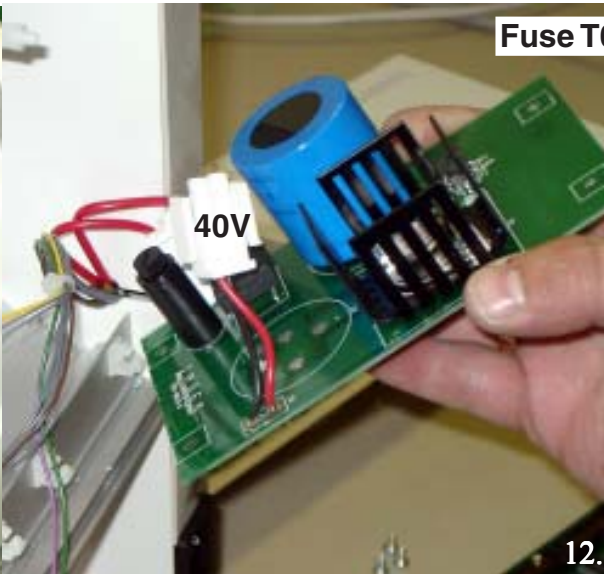

12.




13.

Fuse T6,3A/250V Slow blow




14.

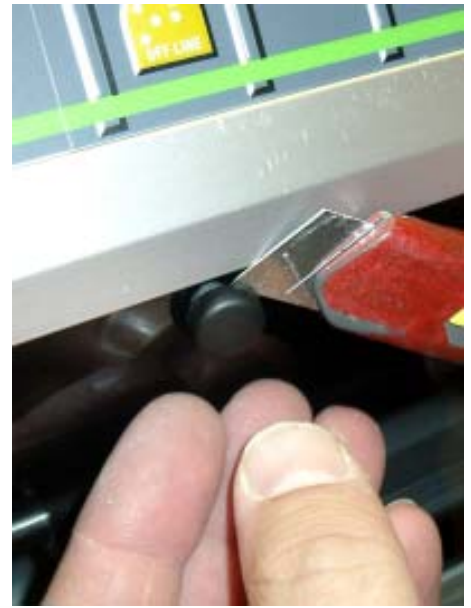

15.



16.

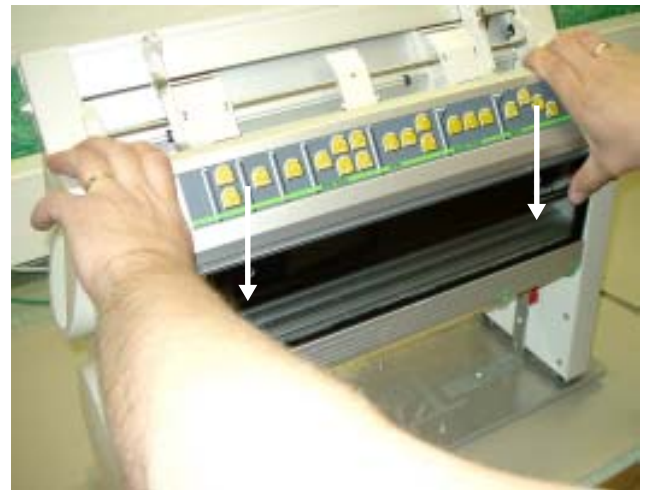

17.



18.



19.



20.



21.



22.




23.




PH2



24.

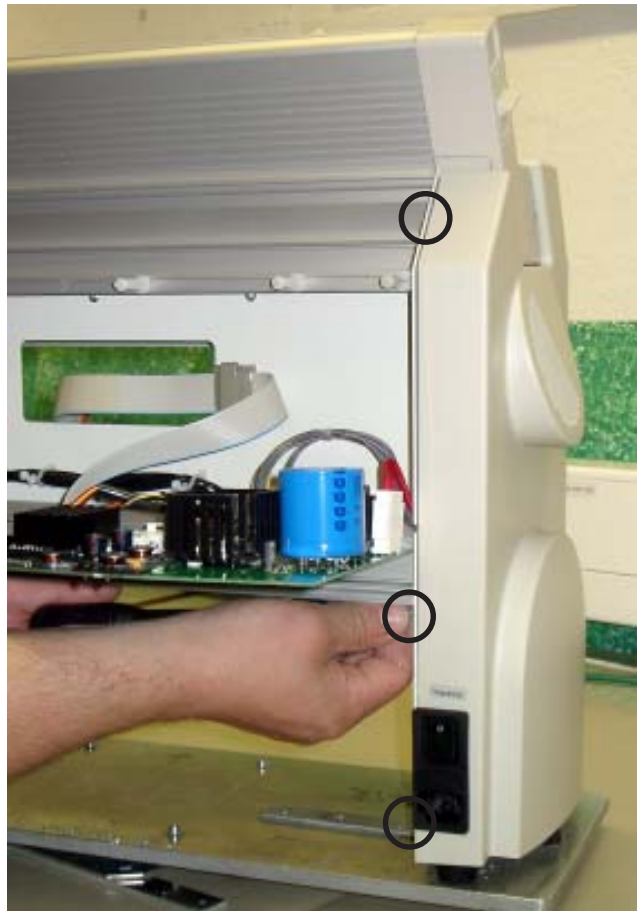

25.

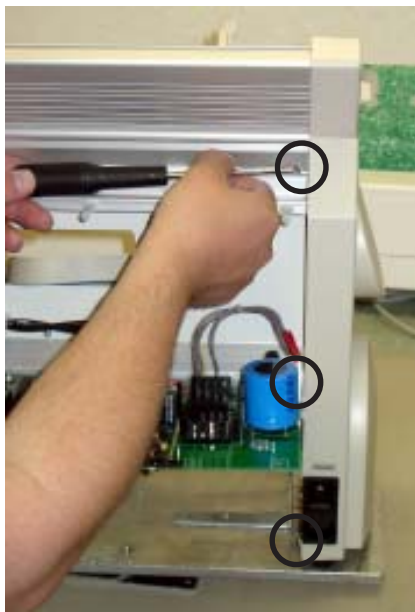


26.



27.



28.

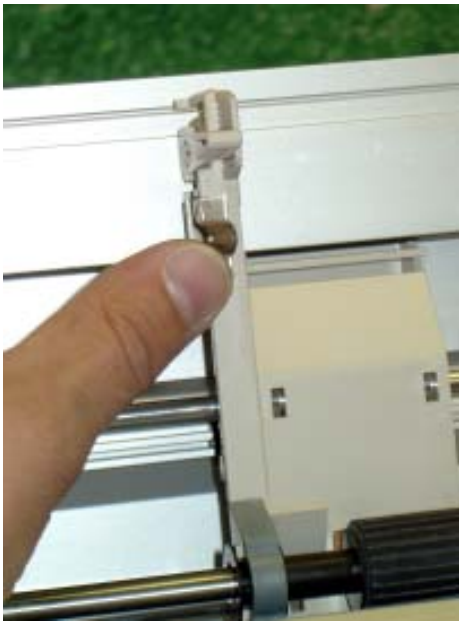


29.



30.




31.

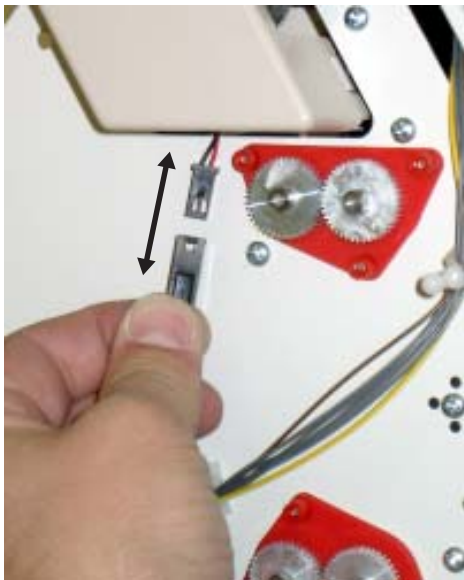

32.




33.

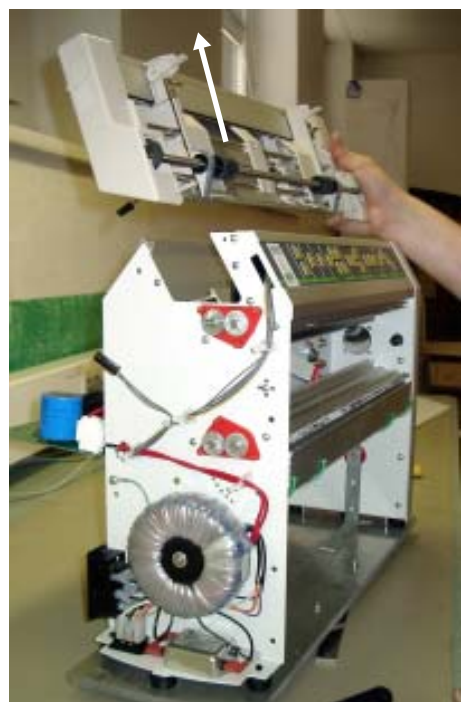

34.



35.

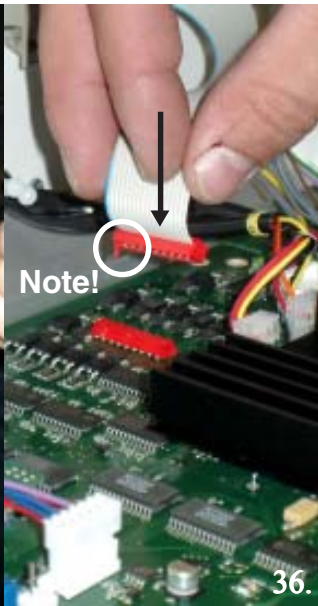

36.




37.



38.



39.

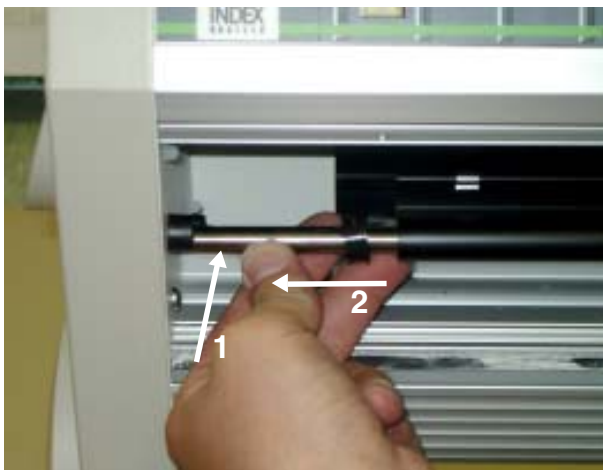

40.



41.


42.



Everest



4X4PRO

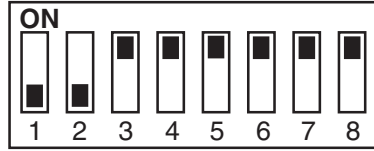

43.

44.




45.



46.



47.

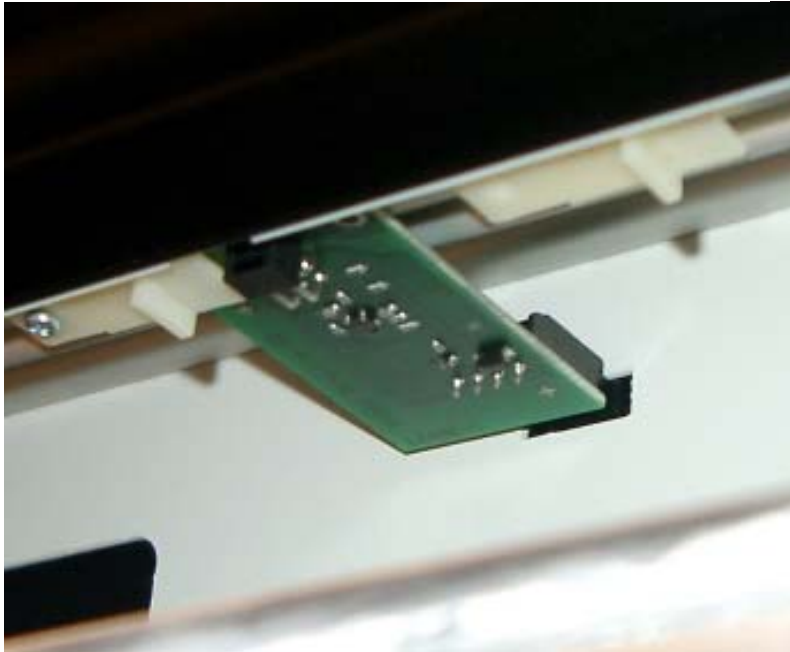

48.



49.