


# Mounting guide Braille Box V4

## Paper guide for tray, (no:2487/2488)

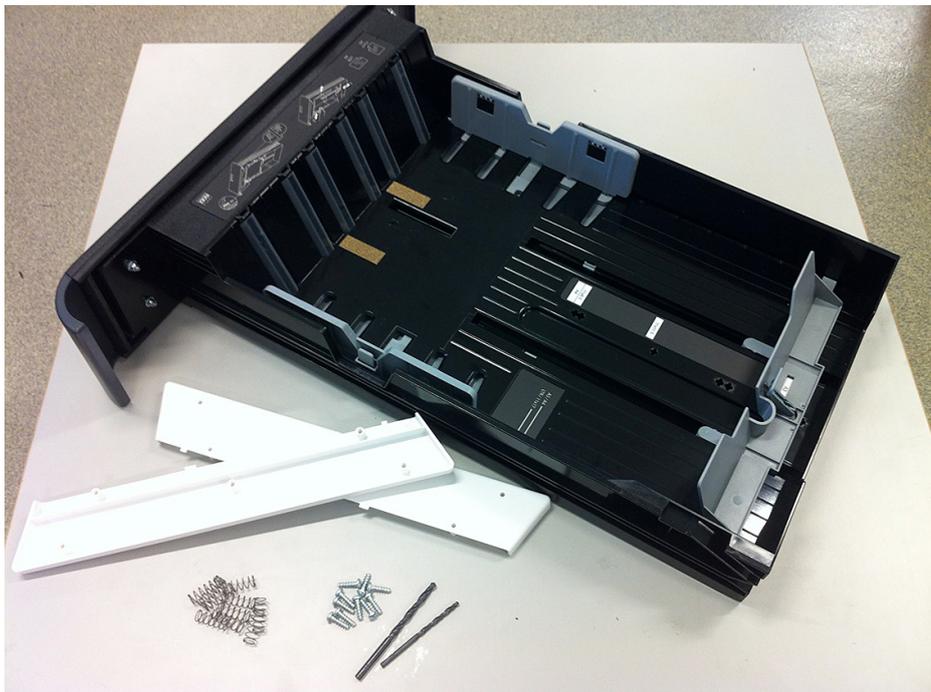


Speed drills: 5.5 and 4 mm



10 Springs (part no: 2501): Length 25mm, inner diameter 8mm.

10 Screws (part no: 1050): TP 5.0 x 16 (A3/A4)


10 Screws (part no: 2492): TP 5.0 x 20 (i.e letter size)

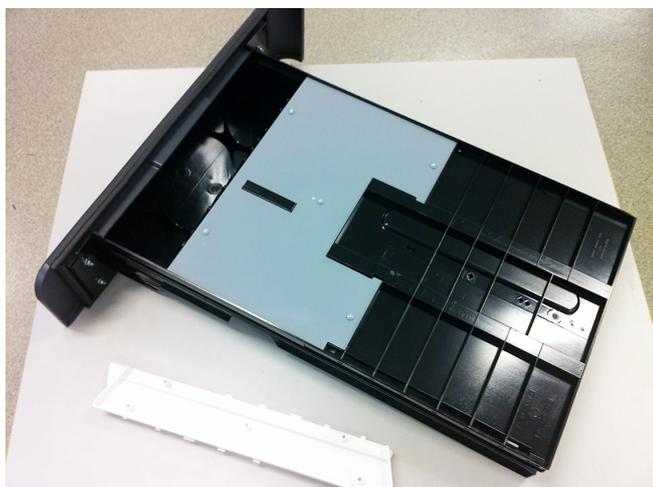


1. Remove the bottom plate.




2. Remove the old paper guides.

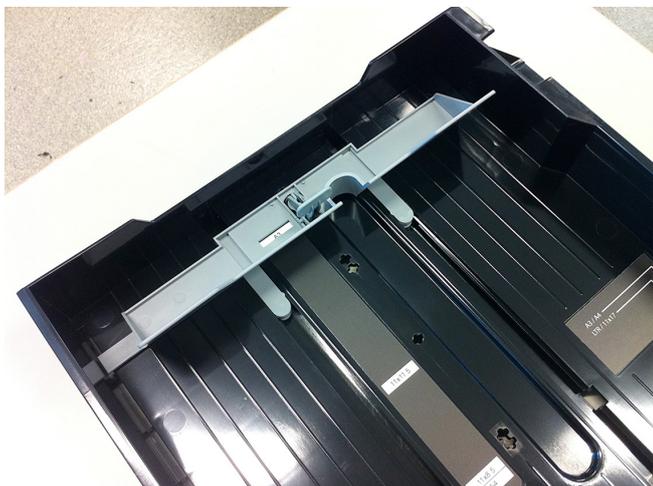


3. Remove Rear Stop Lever

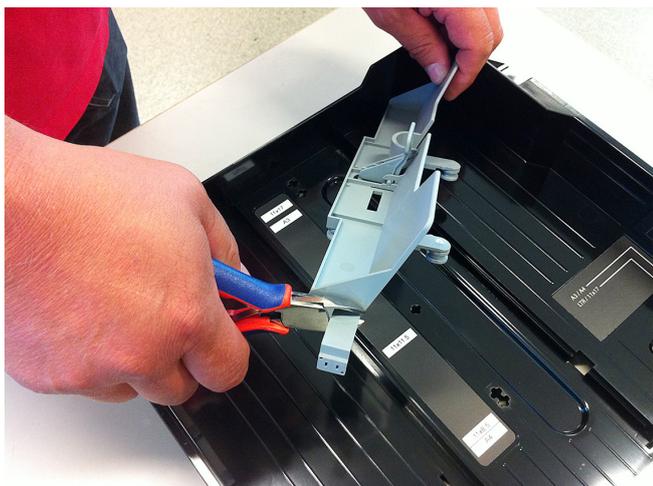

4. Cut off "plastic arm" as shown in picture.

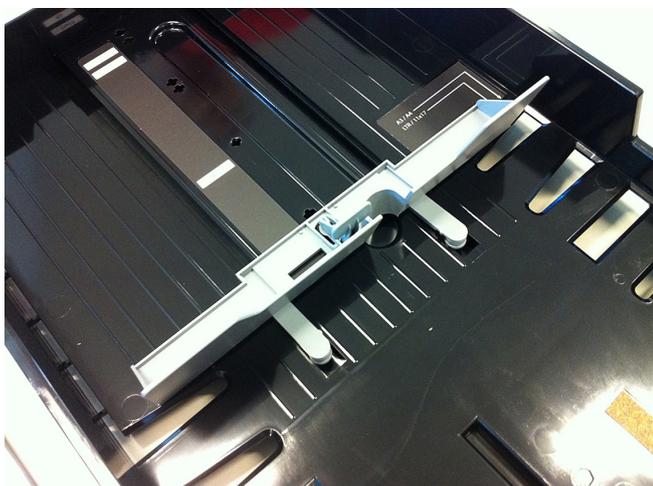

5. Remount Rear Stop Lever.

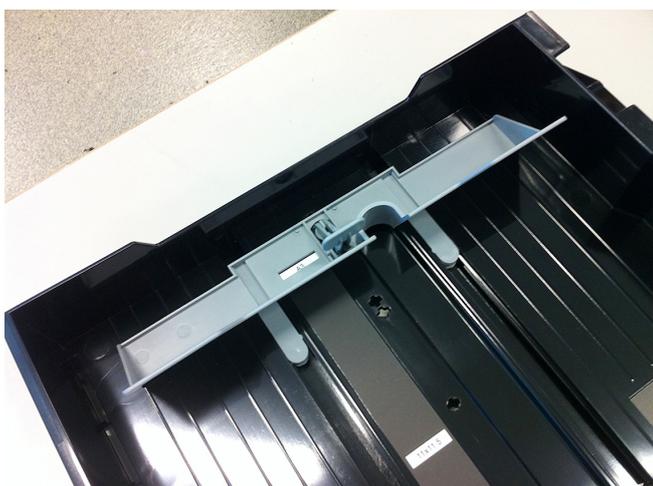


6. Make sure that it is in the correct position.



7. Turn the tray upside down.



8. Replace the bottom plate.

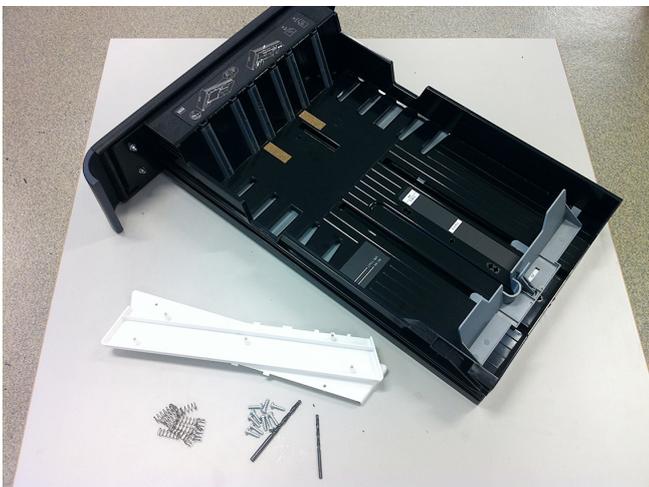

9. Ready for mounting of the new paper guides.




10. Place the guides in position. Drill through the two TOP holes using a 4mm speed drill.




11. Remove the paper guide and expand the two holes using a 5.5 mm speed drill.



12. Mount the paper guide on the outside with two screws (5.0 x 16)

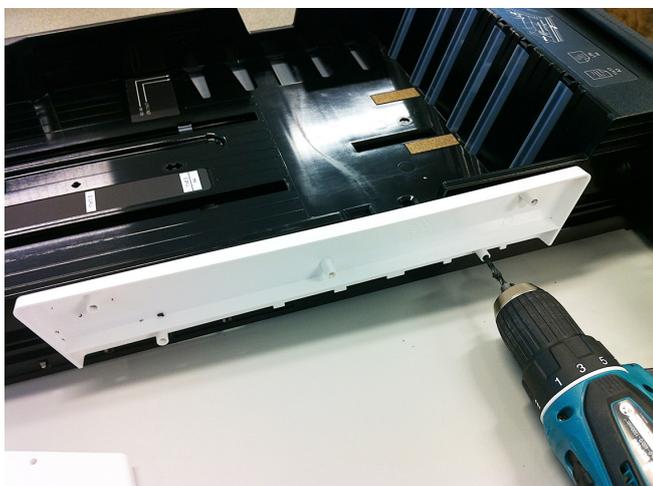


13. Drill the three remaining holes using the 4 mm speed drill.

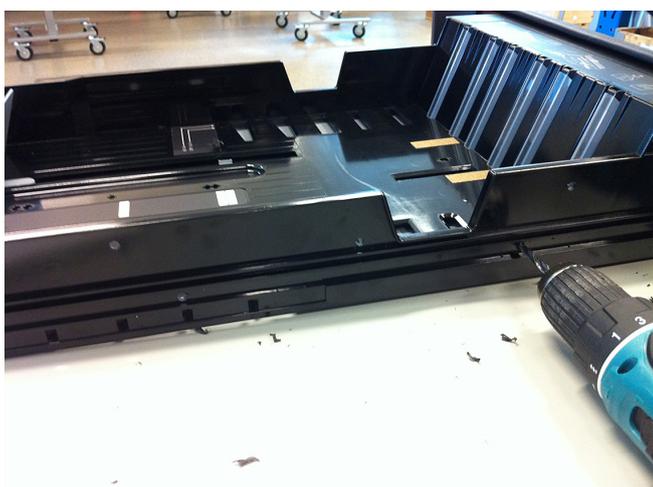

14. Remove the paper guide and expand the three holes using the 5.5 mm speed drill.



15. Place the springs over the "hubs"

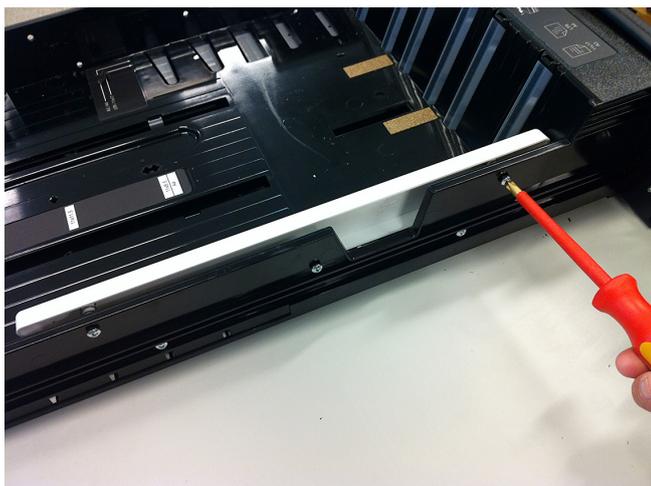

16. Mount the paper guides with 10 screws (5.0 x 16)



17. like this..



18. Tighten all 10 screws gently



19. Place your paper in the tray and adjust the paper guides using a PH2 screwdriver.



20. Adjust the Paper guides so that the paper is centered in the tray. Do not overtighten the guides, the paper should slide smoothly up to the embossing tower.

Note. When using smaller paper than A3/A4 (i.e letter size) you need to exchange the screws to the longer ones. (TP 5.0 x 20mm)



21. Done!